

Comments

GE	Robertson Model Number	Description	Comments	
			Mounting	Ballast Factor
47534 – B224PUNVCOG1C	PST139T5MVW /W	1x39T5 Program Start HPF 120V thru 277V ballast	*	*
47540 – B239PUNVDOG1C	PSV239T5MV /A	2x39T5 Program Start HPF 120V thru 277V ballast		
47540 – B239PUNVDOG1C	PSV239T5MVW /W	2x39T5 Program Start HPF 120V thru 277V ballast		
47540 – B239PUNVDOG1C	PST224T5MVW /W	2x24T5 Program Start HPF 120V thru 277V ballast	*	
GE132MAXLULTRA	ISL132T8HEMVL /A	1x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
GE132MVN	ISS132T8MVW /B	1x32T8 Instant Start HPF 120V thru 277V ballast		
GE132MVN GE232MVN GE232MAXN42T	ISS232T8MVW /B	2x32T8 Instant Start HPF 120V thru 277V ballast		
GE132MVPSH	PSA132T8HEMVH /A	1x32T8 Program Start HPF, 120V thru 277V NEMA Premium ballast		
GE132MVPSN	PSA132T8HEMV /A	1x32T8 Program Start HPF, 120V thru 277V NEMA Premium ballast		
GE180MVPSD	PSV180T5IV /A	1x80 Program Start HPF 100V thru 277V ballast		
GE228MVPSA	PST135T5MVW /W	1x35T5 Program Start HPF 120V thru 277V ballast	*	
GE228MVPSA	PSV228T5MV /A	2x28T5 Program Start HPF 120V thru 277V ballast		
GE228MVPSA	PSV235T5MV /A	2x35T5 Program Start HPF 120 thru 277V ballast		
GE228MVPSA	PST228T5MVW /W	2x28T5 Program Start HPF 120V thru 277V ballast		
GE228MVPSA	PSW228T5120 /A	2x28T5 Program Start NPF 120V ballast	*	*
GE232120N	ISL232T8120 /B	2x32T8 Instant Start NPF 120V ballast		
GE232120N	ISU232T8120 /B	2x32T8 Instant Start NPF 120V ballast		
GE232120N	IEA232T8120N /B	2x32T8 Instant Start NPF 120V ballast		
GE232120N	ISL432T8120 /B	4x32T8 Instant Start NPF 120V ballast		
GE232120N	IES232T8120 /B	2x32T8 Instant Start HPF 120V ballast		
GE232MAXLULTRA	ISL232T8HEMVL /A	2x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
GE232MAXLULTRA	ISL232T8HEMVL /A	2x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
GE232MAXNULTRA	ISL232T8HEMV /A	2x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
GE232MAXNULTRA	ISL232T8HEMV /A	2x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
GE232MVPSH	PSA232T8HEMVH /A	2x32T8 Program Start HPF, 120V thru 277V NEMA Premium ballast		
GE232MVPSH	PSA232T8HEMVH /A	2x32T8 Program Start HPF 120V thru 277V NEMA Premium ballast		
GE232MVPSN	PSA232T8HEMV /A	2x32T8 Program Start HPF 120V thru 277V NEMA Premium ballast		
GE232MVPSN	PSA232T8HEMV /A	2x32T8 Program Start HPF, 120V thru 277V NEMA Premium ballast		
GE-254MVPS90F42D	PST154T5MVW /W	1x54T5 Program Start HPF 120V thru 277V ballast	*	
GE-254MVPSD	PSR255FTMV /A	2x54T5 Program Start HPF 120V thru 277V ballast	*	
GE-254MVPSD	PSV254T5MV /A	2x54T5 Program Start HPF 120V thru 277V ballast		
GE-254MVPSD	PSV254T5MVVEL /A	2x54T5 Program Start HPF 120V thru 277V ballast with Leads		
GE-254MVPSD	PSV254T5MVW /W	2x54T5 Program Start HPF 120V thru 277V ballast		
GE259MVN	ISR259T8MVW /B	2x96T8 Instant Start HPF 120V thru 277V ballast		
GE296HOMVN	PSD248T12HOMV /A	2x48T12HO Program Start HPF 120V thru 277V ballast		*
GE296HOMVN	PSD248T12HOMV/AN	2x48T12 Program Start HPF 120V thru 277V ballast		*
GE296HOMVN	PSR248T12HOMV /A	2x48T12 Program Start HPF 120V thru 277V ballast		*
GE296HOMVN	RSD296T12HOMV	2x96T12 Rapid Start 120V thru 277V ballast	*	*
GE332120N	IEL332T8120 /B	3x32T8 Instant Start HPF 120V ballast		
GE332MAXLULTRA	ISL332T8HEMVL /A	3x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
GE332MAXLULTRA	ISL332T8HEMVL /A	3x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
GE332MAXNULTRA	ISL332T8HEMV /A	3x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
GE332MAXNULTRA	ISL332T8HEMV /A	3x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
GE332MVN	ISL332T8MVW /B	3x32T8 Instant Start HPF 120V thru 277V ballast		

Comments

GE	Robertson Model Number	Description	Mounting	Ballast Factor
GE432120N	IEL432T8120 /B	4x32T8 Instant Start HPF 120V ballast		
GE432MAXLULTRA	ISL432T8HEMVL /A	4x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
GE432MAXLULTRA	ISL432T8HEMVL /A	4x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
GE432MAXNULTRA	ISL432T8HEMV /A	4x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
GE432MAXNULTRA	ISL432T8HEMV /A	4x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
GE432MVN	ISL432T8MVW /B	4x32T8 Instant Start HPF 120V thru 277V ballast		
GE-454MVPS90G	PSY454T5MVEL /A	4x54T5 Program Start HPF 120V thru 277V ballast with Leads	*	
GES240RS120	RES240T12120 /B	2x40T12 Rapid Start HPF 120V ballast		
GES260ISMVN	ISD296T12MV /B	2x96T12 Instant Start HPF 120V thru 277V ballast		
GES260ISMVN	ISL260T12MV /B	2x60T12 Instant Start HPF 120V thru 277V ballast		
GES260ISMVN	IED296T12120 /B	2x96T12 Instant Start HPF 120V ballast	*	
GES260ISMVN	IEL260T12120 /B	2x60T12 Instant Start HPF 120V ballast		