

Osram	Robertson Model Number	Description	Mounting	Ballast Factor
GE254MVPS90F42	PSV254T5MVEL /A	2x54T5 Program Start HPF 120V thru 277V ballast with Leads		
QHE1X32T8UNVISLSC	ISS132T8MVW /B	1x32T8 Instant Start HPF 120V thru 277V ballast		
QHE1X32T8UNVISLSC	ISL132T8HEMVL /A	1x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
QHE1X32T8UNVISNSC	PSA132T8HEMV /A	1x32T8 Program Start HPF, 120V thru 277V NEMA Premium ballast		
QHE1X32T8UNVISNSC	ISL232T8HEMV /A	2x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
QHE2X32T8UNVISLSC	ISL232T8HEMVL /A	2x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
QHE2X32T8UNVISLSC	ISL232T8HEMVL /A	2x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
QHE2X32T8UNVISNSC	ISL232T8HEMV /A	2x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
QHE2X32T8UNVPSHHT	PSA232T8HEMVH /A	2x32T8 Program Start HPF, 120V thru 277V NEMA Premium ballast		
QHE2X32T8UNVPSHHT	PSA232T8HEMVH /A	2x32T8 Program Start HPF 120V thru 277V NEMA Premium ballast		
QHE2X59T8UNVISNSC	ISR259T8MVW /B	2x96T8 Instant Start HPF 120V thru 277V ballast		
QHE3X32T8UNVISLSC	ISL332T8HEMVL /A	3x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
QHE3X32T8UNVISLSC	ISL332T8HEMVL /A	3x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
QHE3X32T8UNVISNSC	ISL332T8HEMV /A	3x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
QHE3X32T8UNVISNSC	ISL332T8HEMV /A	3x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
QHE4X32T8UNVISLSC	ISL432T8HEMVL /A	4x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
QHE4X32T8UNVISLSC	ISL432T8HEMVL /A	4x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
QHE4X32T8UNVISNSC	ISL432T8HEMV /A	4x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
QHE4X32T8UNVISNSC	ISL432T8HEMV /A	4x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
QT1X3924120PHO QT1X3942277PHO	PST139T5MVW /W	1x39T5 Program Start HPF 120V thru 277V ballast	*	*
QT1X3924120PHO QT1X3942277PHO QT2X3924120PHO QT2X3924277PHO	PSV239T5MV /A	2x39T5 Program Start HPF 120V thru 277V ballast		
QT1X3924120PHO QT1X3942277PHO QT2X3924120PHO QT2X3924277PHO	PSV239T5MVW /W	2x39T5 Program Start HPF 120V thru 277V ballast		
QT2X28120PS QT2X28277PS QTP2X28T5120PSNE QTP2X28T5277PSNE	PSV228T5MV /A	2x28T5 Program Start HPF 120V thru 277V ballast		
QT2X28120PS QT2X28277PS QTP2X28T5120PSNE QTP2X28T5277PSNE	PST228T5MVW /W	2x28T5 Program Start HPF 120V thru 277V ballast		
QT2X28120PS QTP2X28T5120PSNF	PSW228T5120 /A	2x28T5 Program Start NPF 120V ballast	*	*
QT2X32T8/120ISNSC	IES232T8120 /B	2x32T8 Instant Start HPF 120V ballast		
QT2X32T8120ISNSC	ISL232T8120 /B	2x32T8 Instant Start NPF 120V ballast		
QT2X32T8120ISNSC	ISU232T8120 /B	2x32T8 Instant Start NPF 120V ballast		
QT2X32T8120ISNSC	IEA232T8120N /B	2x32T8 Instant Start NPF 120V ballast		
QT2X32T8120ISNSC	ISL432T8120 /B	4x32T8 Instant Start NPF 120V ballast		
QT2X96120IS	ISD296T12MV /B	2x96T12 Instant Start HPF 120V thru 277V ballast		
QT2X96120IS	ISL260T12MV /B	2x60T12 Instant Start HPF 120V thru 277V ballast		
QT2X96120IS	IED296T12120 /B	2x96T12 Instant Start HPF 120V ballast	*	
QT2X96120IS	IEL260T12120 /B	2x60T12 Instant Start HPF 120V ballast		
QT2X96T12HO120RSN	PSD248T12HOMV /A	2x48T12HO Program Start HPF 120V thru 277V ballast		*
QT2X96T12HO120RSN	PSD248T12HOMV/AN	2x48T12 Program Start HPF 120V thru 277V ballast		*
QT2X96T12HO120RSN	PSR248T12HOMV /A	2x48T12 Program Start HPF 120V thru 277V ballast		*
QT2X96T12HO120RSN	RSD296T12HOMV	2x96T12 Rapid Start 120V thru 277V ballast	*	*

Osram	Robertson Model Number	Description	Mounting	Ballast Factor
QT3X32T8120ISNSC	IEL332T8120 /B	3x32T8 Instant Start HPF 120V ballast		
QT4X32T8120ISNSC	IEL432T8120 /B	4x32T8 Instant Start HPF 120V ballast		
QTP1X32T8UNVISNSC QTP2X32T8UNVISHSC QTP2X32T8120ISNSH QTP2X32T8277ISNSH	ISS232T8MVW /B	2x32T8 Instant Start HPF 120V thru 277V ballast		
QTP1X32T8UNVPSNTC	PSA132T8HEMV /A	1x32T8 Program Start HPF 120V thru 277V NEMA Premium ballast		
QTP1X54T5HOUNV	PST154T5MVW /W	1x54T5 Program Start HPF 120V thru 277V ballast	*	
QTP1X80T5HOUNVPSN NL	PSV180T5IV /A	1x80 Program Start HPF 100V thru 277V ballast		
QTP2X28T5UNVPSNE	PST135T5MVW /W	1x35T5 Program Start HPF 120V thru 277V ballast	*	
QTP2X28T5UNVPSNE	PSV235T5MV /A	2x35T5 Program Start HPF 120 thru 277V ballast		
QTP2X32T8UNVPSNTC	PSA232T8HEMV /A	2x32T8 Program Start HPF 120V thru 277V NEMA Premium ballast		
QTP2X32T8UNVPSNTC	PSA232T8HEMV /A	2x32T8 Program Start HPF, 120V thru 277V NEMA Premium ballast		
QTP2X39	PST224T5MVW /W	2x24T5 Program Start HPF 120V thru 277V ballast	*	
QTP2X40T12120RSNSC	RSW140T12120 /A	1x40T12 Preheat-RapidStart NPF 120V ballast	*	
QTP2X40T12120RSNSC	RSW240T12120 /B	2x40T12 Preheat-RapidStart NPF 120V ballast	*	*
QTP2X40T12120RSNSC	RES240T12120 /B	2x40T12 Rapid Start HPF 120V ballast		
QTP2X52T5HOUNVPSN	PSV254T5MV /A	2x54T5 Program Start HPF 120V thru 277V ballast		
QTP2X54T5HOUNV	PSV254T5MVW /W	2x54T5 Program Start HPF 120V thru 277V ballast		
QTP2X54T5HOUNVPSN NL	PSR255FTMV /A	2x54T5 Program Start HPF 120V thru 277V ballast	*	
QTP3X32T8UNVISHSC	ISL332T8MVW /B	3x32T8 Instant Start HPF 120V thru 277V ballast		
QTP4X32T8UNVISHSC QTP4X32T8120ISNSC QTP4X32T8277ISNSC	ISL432T8MVW /B	4x32T8 Instant Start HPF 120V thru 277V ballast		
QTP4X45T5HOUNV	PSY454T5MVEL /A	4x54T5 Program Start HPF 120V thru 277V ballast with Leads	*	