

Universal	Robertson Model Number	Description	Comments	
			Mounting	Ballast Factor
B132IPUNVHPA	PSA132T8HEMV /A	1x32T8 Program Start HPF, 120V thru 277V NEMA Premium ballast		
B132IUNVELA	ISL132T8HEMVL /A	1x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
B132IUNVHPB	ISS132T8MVW /B	1x32T8 Instant Start HPF 120V thru 277V ballast		
B132PUNVHPA	PSA132T8HEMV /A	1x32T8 Program Start HPF 120V thru 277V NEMA Premium ballast		
B132PUNVHPA	PSA132T8HEMVH /A	1x32T8 Program Start HPF, 120V thru 277V NEMA Premium ballast		
B224PUNVC	PST224T5MVW /W	2x24T5 Program Start HPF 120V thru 277V ballast	*	
B228PUNV85D				
BT5228120	PST228T5MVW /W	2x28T5 Program Start HPF 120V thru 277V ballast		
BT5228277				
B228PUNVC	PSV228T5MV /A	2x28T5 Program Start HPF 120V thru 277V ballast		
B228PUNVC	PSV235T5MV /A	2x35T5 Program Start HPF 120 thru 277V ballast		
B232I120RESA	ISU232T8120 /B	2x32T8 Instant Start NPF 120V ballast		
B232I120RESG	ISL232T8120 /B	2x32T8 Instant Start NPF 120V ballast		
B232I120RHA	IES232T8120 /B	2x32T8 Instant Start HPF 120V ballast		
B232IUNVELA	ISL232T8HEMVL /A	2x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
B232IUNVELA				
B132IUNVELA	ISL232T8HEMVL /A	2x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
B232I120EL				
B232I277EL				
B232IUNVHEA	ISL232T8HEMV /A	2x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
B232IUNVHEA				
B132IUNVHE	ISL232T8HEMV /A	2x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
B232I120HE				
B232I277HE				
B232IUNVHPB				
B232I120RHA	ISS232T8MVW /B	2x32T8 Instant Start HPF 120V thru 277V ballast		
B232I277RHA				
B232PUNVDRHA	PSA232T8HEMVH /A	2x32T8 Program Start HPF, 120V thru 277V NEMA Premium ballast		
B232PUNVDRHA	PSA232T8HEMVH /A	2x32T8 Program Start HPF 120V thru 277V NEMA Premium ballast		
B232PUNVHEA				
B232PUNVHPA	PSA232T8HEMV /A	2x32T8 Program Start HPF, 120V thru 277V NEMA Premium ballast		
B232PUNVDRA				
B232PUNVHPA	PSA232T8HEMV /A	2x32T8 Program Start HPF 120V thru 277V NEMA Premium ballast		
B232SR120S	PSL232T8MV3D /A	2x32T8 Program Start HPF 120V thru 277V Dimming ballast		
B232SR277S				
B239PUNVD	PSV239T5MV /A	2x39T5 Program Start HPF 120V thru 277V ballast		
B239PUNVD	PSV239T5MVW /W	2x39T5 Program Start HPF 120V thru 277V ballast		
B240R120HP	RSW240T12120 /B	2x40T12 Preheat-RapidStart NPF 120V ballast	*	*
B240R120HP	RES240T12120 /B	2x40T12 Rapid Start HPF 120V ballast		
B24PUNVC	PST139T5MVW /W	1x39T5 Program Start HPF 120V thru 277V ballast	*	*
B254PUNVD	PST154T5MVW /W	1x54T5 Program Start HPF 120V thru 277V ballast	*	
B254PUNVD	PSR255FTMV /A	2x54T5 Program Start HPF 120V thru 277V ballast	*	
B254PUNVD	PSV254T5MVEL /A	2x54T5 Program Start HPF 120V thru 277V ballast with Leads		
B254PUNVHB	PSV254T5MV /A	2x54T5 Program Start HPF 120V thru 277V ballast		
B254PUNVHB	PSV254T5MVW /W	2x54T5 Program Start HPF 120V thru 277V ballast		
B259IUNVHPA	ISR259T8MVW /B	2x96T8 Instant Start HPF 120V thru 277V ballast		
B260I120RH	IED296T12120 /B	2x96T12 Instant Start HPF 120V ballast	*	
B260I120RH	IEL260T12120 /B	2x60T12 Instant Start HPF 120V ballast		
B260IUNVHP	ISD296T12MV /B	2x96T12 Instant Start HPF 120V thru 277V ballast		

Universal	Robertson Model Number	Description	<i>Mounting</i>	<i>Ballast Factor</i>
B260IUNVHP	ISL260T12MV /B	2x60T12 Instant Start HPF 120V thru 277V ballast		
B295SRUNVHP	RSD296T12HOMV	2x96T12 Rapid Start 120V thru 277V ballast	*	*
B332I120RHA	IEL332T8120 /B	3x32T8 Instant Start HPF 120V ballast		
B332IUNVELA	ISL332T8HEMVL /A	3x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
B332IUNVELA B332I120EL B332I277EL	ISL332T8HEMVL /A	3x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
B332IUNVHEA	ISL332T8HEMV /A	3x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
B332IUNVHEA B332I120HE B332I277HE B332IUNVHPA	ISL332T8HEMV /A	3x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
B332IUNVHPA	ISL332T8MVW /B	3x32T8 Instant Start HPF 120V thru 277V ballast		
B432I120RESA	IEA232T8120N /B	2x32T8 Instant Start NPF 120V ballast		
B432I120RESA	ISL432T8120 /B	4x32T8 Instant Start NPF 120V ballast		
B432I120RHA	IEL432T8120 /B	4x32T8 Instant Start HPF 120V ballast		
B432IUNVELA	ISL432T8HEMVL /A	4x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
B432IUNVELA B432I120EL B432I277EL	ISL432T8HEMVL /A	4x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
B432IUNVHEA	ISL432T8HEMV /A	4x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
B432IUNVHEA B432I120HE B432I277HE B432IUNVHPA B432IUNVD	ISL432T8HEMV /A	4x32T8 Instant Start HPF 120V thru 277V NEMA Premium ballast		
B432IUNVHPA B432I120RHA B432I277RHA	ISL432T8MVW /B	4x32T8 Instant Start HPF 120V thru 277V ballast		
B454PUNVE	PSY454T5MVEL /A	4x54T5 Program Start HPF 120V thru 277V ballast with Leads	*	
BT5128120 BT5128277	PST135T5MVW /W	1x35T5 Program Start HPF 120V thru 277V ballast	*	
BT5228120	PSW228T5120 /A	2x28T5 Program Start NPF 120V ballast	*	*